
 


End cap to be pressed into bearing housing in direction of arrow 'A' to dimension shown.

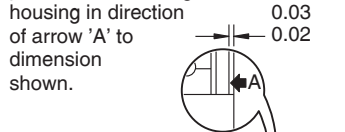

This dimension to apply after bearing is pressed onto rotor.



Index No.	Part No.	Description	No. Req'd.	Index No.	Part No.	Description	No. Req'd.
2	CA157008	Inlet Bushing (1/4 NPT)	1	26	CA157020	Planet Cage	1
3	CA155184	O-Ring	1	27	CA157021	Planet Wheel	2
4	CA156955	Pistol Grip/Motor Housing (Black)	1	28	CA157022	Bearing-Caged Bearing	2
5	CA156959	Needle Roller	1	29	C075878	Bearing	1
6	CA157000	Ball	1	30	CA157024	Washer Steel	1
7	CA157001	Spring	1	31	CA157025	Washer Felt	1
8	CA157002	O-Ring	1	32	CA157026	Gear-Nose	1
9	CA157003	Air Valve Cap	1	33	CA157027	End Cap	1
10	CA157004	Trigger	1	34	CA157028	O-Ring	1
11	CA157005	Trigger Retainer	1	35	CA157029	Silencer Felt	1
12	CA157006	Roller	1	36	CA157030	Silencer	1
13	CA157007	Screw	1	37	CA157031	Circlip	1
14	CA155171	Pin	2	38	CA157032	Spindle Nut	1
15	C143774	End Cap	1	39	CA155159	Chuck	1
16	CA157010	Rear Bearing Housing	1	40	C143751	Key	1
17	S080864	Bearing	2	41	CA156018	Warning Decal-Not Shown	1
18	C143769	Bearing Plate	2				
19	CA157013	Rotor Blade-Set(5)	1				
20	CA157014	Rotor	1				
21	C143770	Liner	1				
22	C143767	Housing Front Bearing	1				
23	C066342	Bearing	1				
25	CA157019	Planet Pin	2				