

ATEX APPROVED





CL50 & CL75 operating instructions

WHO WE ARE

CENGAR AIR SAW MODELS CL50 & CL75

Professionals in many Industries have relied on Cengar products for reliability, low maintenance and operator safety for decades. Our Cengar Air Saws are used Worldwide in many industries, where our quality saws are relied upon and trusted for their cutting performance. Since 2016 our Pallet Spreader has become the pallet repairer's number one choice for helping to repair and recycle used pallets. We are proud that we can help sustainability and the environment. More recently Cengar has added impact sockets to its portfolio, we are able to manufacture high-quality impact sockets for use on pneumatic, hydraulic, petrol and battery Impact Wrenches.

We recommend normal safe working practices should be followed as per the Health and Safety at Work Act, or the appropriate National and State Laws. We recommend that eye and ear protection be worn when using Cengar Saws.

SPECIFIC	CATIONS
Speed	1200 strokes per minute
Stroke	45mm
Air Consumption	0.168m³/minute
Air Pressure	5-6 Bar
Weight	2.5Kgs
Length	400mm
Height	135mm
Width	40.6mm
Vibration Level Averaged	3.2m/s ²
Sound Pressure Level	82.9dbA
Sound Power Level	92.4dbA
CL50 Atex Certification	€ II 2G Ex h IIC T2 Gb
CL75 Atex Certification	⟨Ex⟩ II 2G Ex h IIC T3 Gb

Each machine is marked with a serial number, which contains the year and month of construction, along with an identifier number.

Serial number example:



Month of construction

Machine identified as shown, nose piece not to be interchanged



UK DECLARATION OF CONFORMITY

EU DECLARATION OF CONFORMITY

We the undersigned, declare under our sole responsibility that the following apparatus:

Machine Description	Cengar Air Saw
Machine Type	CL50 & CL75

Is in conformity with the following relevant UK legislation:

Su	pply of Machinery (Safety) R	egulations 2008 (as amended)
	UKEX Regulations	SI 2016:1107

Based on the following Harmonised Standards:

EN ISO 4414:2010 EN ISO 80079-36:2016 EN ISO 80079-37:2016 EN 60079-0:2018

And therefore complies with the essential requirements of those directives.

The following ignition hazards have been identified when the equipment is in use, hot surfaces, mechanical sparks, electrostatic charging. These are mitigated as the equipment was designed to meet the requirements of protection concept constructional safety "c".

ADI	DITIONAL INFORMATION
UKEX coding	CL 50 (Ex) II 2G Ex h IIC T2 Gb CL 75 (Ex) II 2G Ex h IIC T3 Gb
Approved Body (UKEX holding technical file)	Element Materials Technology Warwick Ltd Unit 1, Pendle Place, Skelmersdale, West Lancashire WN8 9PN, United Kingdom.
Identification Number	0891
Certificate No.	EMA21UKEX0011X
Authorised Signature	S. Sha
Date	10/05/2021
Title of Signatory	Commercial Manager - Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax HX4 8LZ
Special Conditions of Safe Use (on the certificate)	 Suitably approved static dissipating or conductive air hose only to be attached to the equipment and terminated to the air supply. Operator to ensure that there is less than 1 Ohm resistance between the ground at the air source and any metallic object to be cut with the equipment. The equipment shall be supplied from a clean air source in an area known to not contain a potentially explosive atmosphere. A filter must be fitted to the supply compressor inlet to prevent dust airflow within the equipment. To comply with UKEX certification regulations it is necessary to use Cengar branded Blades with Cengar Saws.

^{1.} Under normal working conditions can be used in a Zone 1 environment.

We the undersigned, declare under our sole responsibility that the following apparatus:

Machine Description	Cengar Air Saw
Machine Type	CL50 & CL75

Is in conformity with the following relevant EC legislation:

Machinery Directive	2006/42/EC
Atex Directive	2014/34/EU

Based on the following Harmonised Standards:

EN ISO 4414:2010 EN ISO 80079-36:2016 EN ISO 80079-37:2016 EN 60079-0:2018

And therefore complies with the essential requirements of those directives.

The following ignition hazards have been identified when the equipment is in use, hot surfaces, mechanical sparks, electrostatic charging. These are mitigated as the equipment was designed to meet the requirements of protection concept constructional safety "c".

ADI	DITIONAL INFORMATION
ATEX Coding	CL 50 (Ex) II 2G Ex h IIC T2 Gb CL 75 (Ex) II 2G Ex h IIC T3 Gb
Notified Body (Atex holding technical file)	Element Materials Technology Rotterdam B.V. Voorerf 18, 4824 GN Breda, Netherlands
Identification Number	2812
Certificate No.	EMT18ATEX 0032X
Authorised Signature	S.Sha
Date	06/02/2020
Title of Signatory	Commercial Manager - Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax HX4 8LZ
Special Conditions of Safe Use (on the certificate)	 Suitably approved static dissipating or conductive air hose only to be attached to the equipment and terminated to the air supply. Operator to ensure that there is less than 1 Ohm resistance between the ground at the air source and any metallic object to be cut with the equipment. The equipment shall be supplied from a clean air source in an area known to not contain a potentially explosive atmosphere. A filter must be fitted to the supply compressor inlet to prevent dust airflow within the equipment. To comply with ATEX certification regulations it is necessary to use Cengar branded Blades with Cengar Saws.

^{1.} Under normal working conditions can be used in a Zone 1 environment.


^{2.} Classification based on tests cutting a selection of steels & composite materials (MB, MC, Yellow, JSZ) Blades.



^{2.} Classification based on tests cutting a selection of steels & composite materials (MB, MC, Yellow, JSZ) Blades.

INSTRUCTIONS

DO'S & DON'TS

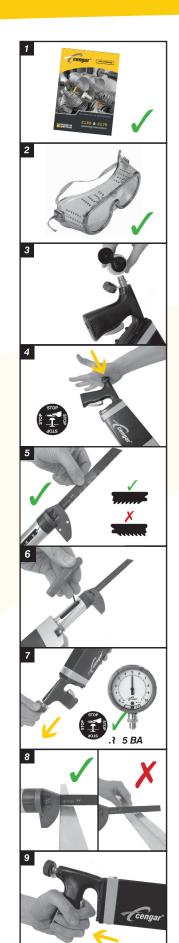


- 1. Always read the instructions.
- 2. Always wear safety glasses.
- 3. Unscrew oil cap and fill with Cengar Green Oil. Replace cap.
- 4. Isolate air supply before fitting blade by pushing stop button in.
- 5. Fit the blade with the teeth facing the machine. Avoid handling the blade teeth.
- 6. Secure blade by tightening both grip screws with supplied T key.
- 7. Connect to 5-6 bar air supply and pull out stop button.
- 8. Ensure nosepiece is pressed against work piece to be cut.
- 9. Press trigger and apply light downward pressure.

Please refer to page 10 for the correct blade selection.


- 1. ALWAYS use Cengar green oil for best results. Keeping the saw clean and well oiled will give excellent reliability, and a long life.
- 2. ALWAYS use Cengar Bi-Metal Shatterproof blades, for safety, and best cutting performance.
- 3. ALWAYS isolate the air supply when changing blades.
- 4. ALWAYS wear eye protection when using saws.
- 5. ALWAYS keep the nosepiece hard against the work piece to prevent excessive vibration.
- 6. ALWAYS isolate the machine when not in use.
- 7. ALWAYS keep others away from the saw blade to prevent injury or trapping.
- 8. ALWAYS have machines vibration tested annually to ensure exposure is kept to the minimum.
- 1. **NEVER** fit breakable "All-Hard" blades in Cengar saws, these can shatter causing injury to the operator and others.
- 2. NEVER operate saw without wearing safety glasses.
- 3. NEVER operate saw whilst you, or others are near the saw blade, which can cause serious injury or trapping.
- 4. NEVER use excessive force because this may increase vibration above safe levels.
- 5. NEVER hold the Cengar saw in a vice by the body. This will distort the bores, rendering the tool inoperative.
- 6. NEVER screw nameplates to the body, as the screws may penetrate an airway or bore.
- 7. NEVER operate the Cengar saw without lubrication.
- 8. NEVER be tempted to clean internal parts with anything other than a clean lint free cloth or Cengar Green oil.
- 9. NEVER modify Cengar saws or use non Cengar parts. This will invalidate ATEX approval and warranty.



CL50FT & CL75FT EXPLODED VIEW

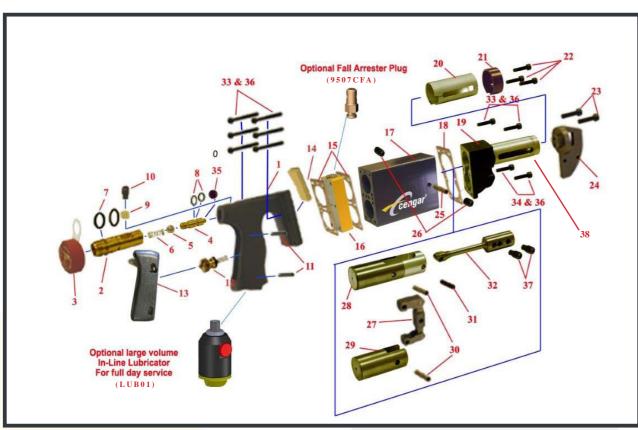

ITEM	PART NO.	DESCRIPTION	NUMBER	ITEM	PART	DESCRIPTION	NUMBER
IIEIVI	PARI NO.	DESCRIPTION	PER TOOL	IIEIVI	NO.	DESCRIPTION	PER TOOL
1	9550	Handle	1	20	1144	Silencer Guard	1
2	9554	Isolator Body	1	21	1143A	Front End Cap	1
3	9553	Oil Cap & Retainer	1	22	54160	Front Cap Screws	3
4	9555	Isolator Nozzle	1	23	54160	Screws-Nosepiece	2
5	9559	Oil Control Ball	1	24	5045-5075	Nosepiece (1/2"-3/4")	1
6	9334A	Spring	1	25	1147	Centre Shaft	1
7	9561	'O' Ring Large	2	26	55516	Screws for Above	2
8	9560	'O' Ring Small	2	27	1150	Link to Pistons	1
9	9557	Detente Spring	1	28	1148	Top Piston	1
10	9556A	Lock Screw	1	29	1152	Bottom Piston	1
2 to 10	9552	Isolator Assembly		30	1147	Pin to Link	2
11	51834	Roll Pin-Trigger	2	31	1147	Pin to Pedestal	1
12	50034	Valve in Handle	1	32	1153-5	Pedestal	1
13	9502	Trigger	1	33	5540	Screw-Handle/Front	8
14	9506	Filter/Gauze	1	34	5520	Screw-Front Lower	2
15	9538	Gasket	2	35	9564	'O' Ring	1
16	1139	Valve Unit	1	36	W55	Serrated Washer	10
17	1141L	Body	1	37	5068	Screw-Blade Grip	2
18	1142	Gasket-Front End	1	38	-	Serial Number	-
19	1143	Front End Complete	1				

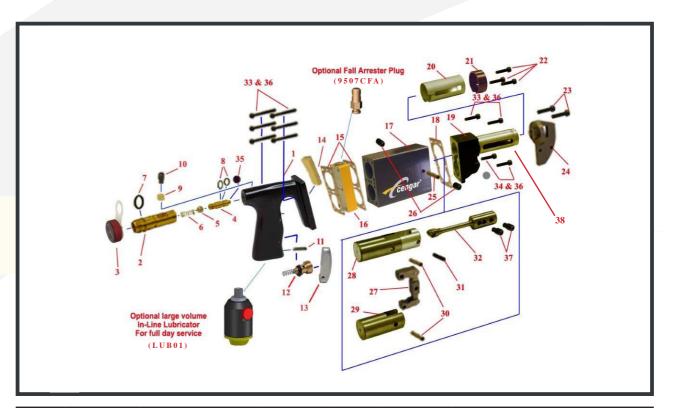

ITEM	PART NO.	DESCRIPTION	NUMBER PER TOOL	ITEM	PART NO.	DESCRIPTION	NUMBER PER TOOL
1	9550FT	Handle	1	20	1144	Silencer Guard	1
2	9554	Isolator Body	1	21	1143A	Front End Cap	1
3	9553	Oil Cap & Retainer	1	22	54160	Front Cap Screws	3
4	9555	Isolator Nozzle	1	23	54160	Screws-Nosepiece	2
5	9559	Oil Control Ball	1	24	5045-5075	Nosepiece (1/2"-3/4")	1
6	9334A	Spring	1	25	1147	Centre Shaft	1
7	9561	'O' Ring Large	2	26	55516	Screws for Above	2
8	9560	'O' Ring Small	2	27	1150	Link to Pistons	1
9	9557	Détente Spring	1	28	1148	Top Piston	1
10	9556A	Lock Screw	1	29	1152	Bottom Piston	1
2 to 10	9552	Isolator Assembly		30	1147	Pin to Link	2
11	51834	Roll Pin-Trigger	1	31	1147	Pin to Pedestal	1
12	50034	Valve in Handle	1	32	1153-5	Pedestal	1
13	9502FT	Trigger	1	33	5540	Screw-Handle/Front	8
14	9506	Filter/Gauze	1	34	5520	Screw-Front Lower	2
15	9538	Gasket	2	35	9564	'O' Ring	1
16	1139	Valve Unit	1	36	W55	Serrated Washer	10
17	1141L	Body	1	37	5068	Screw-Blade Grip	2
18	1142	Gasket-Front End	1	38	-	Serial Number	-
19	1143	Front End Complete					



CENGAR BLADE SELECTION FOR CUTTING SOLID MATERIAL

ADDITIONAL CENGAR SAWS AVAILABLE

	AVAI	LABLE	BLA	DE PI	TCHES	
Thickness (mm)	32 TPI	24 TPI	18 TPI	14 TPI	10-14 TPI Varipitch	10 TPI
2	3	2	1	1	1	1
5	6	5	4	3	2	2
10	13	9	7	6	5	4
15	19	14	11	8	7	6
20	25	19	14	11	9	8
25	31	24	18	14	12	10
30	38	28	21	17	14	12
35	44	33	<i>25</i>	19	17	14
40	<i>5</i> 0	38	28	22	19	16
45	<i>57</i>	43	<i>32</i>	<i>25</i>	21	18
50	63	47	<i>35</i>	28	24	20
55	69	52	39	30	26	22

The numbers in the coloured boxes indicates the actual number of teeth which will be in contact with the work

BLADE SELECTION		
Pipe Diameter (mm)	CL75 on clamp	
50	200mm blade	
100	250mm blade	
150	300mm blade	

GENERAL RULE:
No less that 3 teeth in contact
Ideally between 6 & 12 teeth in contact
No more than 24 teeth in contact

CL50 GENERAL PURPOSE CUTTING USING 12MM (1/2") WIDE CENGAR SHATTERPROOF BLADE			
Туре	Length mm	TPI	
Hand	300	14, 18, 24, 32	
МС	220	10, 14, 18, 24	

CL75 HEAVY STEEL SECTIONS UPTO 150MM DIA USING 19MM (3/4") WIDE SHATTERPROOF BLADES			
Туре	Length mm	TPI	
MB Blue for various steels	150, 200, 250	10/14, 18, 24	
MB Blue for various steels	300	10/14, 14, 18	
MBSS Silver for stainless steels	250, 300	18	

The CL75 can be used with a clamp for pipe cutting. See cengar.com/portfolio/standard-clamp-kit

Visit our website www.cengar.com to view our range of blades, clamps and accessories.

PL905



Steel Sections Bolts, Gratings etc. up to 6mm thick and 25mm Composites.

JP901



Thin metal up to 3mm and GRP to 6mm thick.

CS75



High Quality Steel Pipe up to 150mm dia and similar size sections.

JSZ



Steel Pipe up to 300mm dia and similar size sections.





SERVICE

We offer a full factory repair and refurbishment service for Cengar Saws, normally within 5 working days. Quotations at no charge can be given before work is carried out.

DISTRIBUTOR ADDRESS

Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax, England HX4 8LZ

Tel: 01422 377904 Fax: 01422 377161 enquiries@cengar.com

www.cengar.com





